 


Televes

DVB-T Receiver (MPEG4)

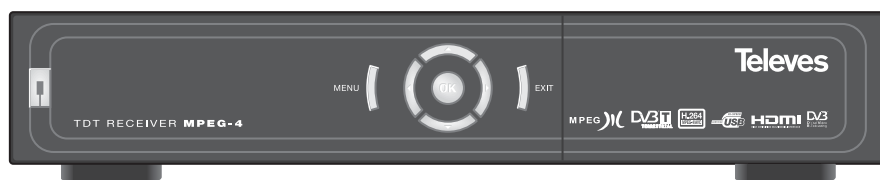

Ref. 7151

User Manual

CONTENTS	Pag.
1.- Precautions	4
2.- General information	5
2.1.- Main features	5
2.2.- Contents	5
3.- Panel and Control Description	6
3.1.- Remote Control	7
4.- Equipment Installation	8
4.1.- Connection to a TV	8
5.- User's Installation	9
5.1.- Install	9
5.2.- Channel Search	9
5.3.- System Setting	10
5.4.- Parental Lock	11
5.5.- Factory Default	11
6.- Basic operating functions	12
6.1.- Select a channel	12
6.2.- Return to previous channel	13
6.3.- Volume and audio control	13
6.4.- Favourites List	13
7.- Manager	14
7.1.- Channel Manager	14
7.2.- Favourites Channel	14
7.3.- Edit Favourites	15
7.4.- Move Channels	15
7.5.- Lock Channels	15
7.6.- Rename Channels	16
7.7.- Delete Channels	16
7.8.- Sort Channels	16
8.- Electronic Programme Guide (EPG)	17
9.- Programme Events	18
9.1.- Timer	18
9.2.- Time Reservation	18
10.- PVR	19
10.1.- Games	19
10.2.- Receiver information	19
10.3.- PVR	20
10.4.- Picture Browser	21
10.5.- USB Browser	21
10.6.- Remove Disk	21
11.- Record/Play	22
11.1.- TimeShift Function	23
Terminological Glossary	24
Menu structure	25
Technical Specifications	26
Guarantee	27

1.- Precautions

The Receiver you have just purchased has been manufactured to international safety standards.

We recommend you to read the following safety tips carefully

ALIMENTATION:

175 - 250 V~ 50/60 Hz.

OVERLOAD:

Do not overload points, extension cords or adaptors to avoid fire and electric shock risks.

LIQUIDS:

Do not expose the Receiver to water leakage or spray.

Do not place objects or vessels containing liquids on the equipment or near it.

SMALL OBJECTS:

Avoid the proximity of small metal objects to the equipment. These could slip through the ventilation slots of the Receiver, causing it serious damage.

CLEANING:

Disconnect the Receiver from the power source before cleaning.

Use a soft rag, slightly moistened in water (without detergent) to clean the outside of the Receiver.

VENTILATION:

Place the Receiver in a well-ventilated area so that the slots are not blocked in any way. Avoid exposure to the sun, to other sources of heat or flames.

Do not place on top of other equipment.

CONNECTIONS:

Make only the recommended connections, in order to avoid possible damage to the equipment.

CONNECTIONS TO TV/VCR:







Turn off the Receiver before connecting or disconnecting to a TV set or a VCR.

NOT DOING THIS may damage the TV or the VCR.

LOCATION:

Locate the Receiver in an interior room, safe from electrical discharges, rain or direct sunlight.

Install the Receiver in horizontal position

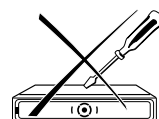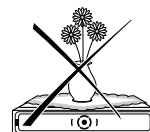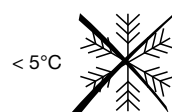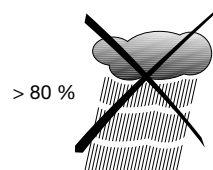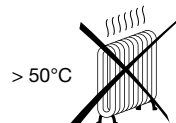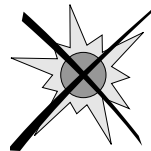

WARNING

RISK ELECTRICAL SHOCK
DO NOT OPEN



IN ORDER TO REDUCE RISK OF ELECTRICAL DISCHARGE, DO NOT REMOVE THE LID.
THERE ARE NO USER-REPAIRABLE PARTS INSIDE THE MACHINE.
FOR ANY REPAIRS, CONTACT A QUALIFIED TECHNICIAN

This symbol indicates that "voltage levels are dangerous" within the product, and that this presents a risk of electric shock or other personal harm.



This symbol indicates that there are important instructions for the use of this product

2.- General Information

This Guide will show that the daily use of this receiver is based on a group of menus and displays on the screen that are very easy to use. These menus will help you to enjoy your receiver, since it will guide you through the installation, the channel ordering, visualization and other functions.

All functions can be activated using the keys located on the remote control and some of these functions can also be activated using the buttons on the front display.

You must take into account that a new software can change the functionality of the receiver.


2.1.- Main features

- Compatible with MPEG2 and MPEG4/H.264
- Prepared for USB PVR
- HDMI Output (720p and 1080i)
- Video Output – RGB/CVBS
- Video Components Y, Pb and Pr
- Two SCARTS (TV & VCR)
- Channel Edition (OFF, Move, Lock and Favourites.
- 32 Lists of Favourite Channels
- Supports OSD Teletext
- Standard Subtitles and Teletext
- EPG (Electronic Programme Guide)
- Parental Lock
- Return Function
- Timer Function
- VFD Display
- Software update via USB or RS-232C
- SPDIF Digital audio output (optical)
- 6 Games

2.2.- Contents

Check that the following components are included in the package:

- 1 x DVB-T Receiver ref.7151
- Instructions Manuals
- 1 x Remote Control
- 2 x "AAA" batteries

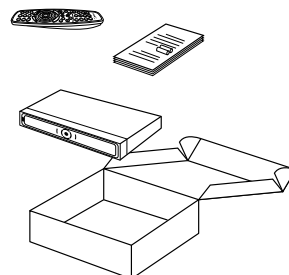


3.- Panel and Control Description

Front Panel





Key	Function
	Switches between normal and standby operating mode.
	Turns the volume down/up. Selects one element from the menu.
	Selects an ascendent or descendent channel. Selects one element from the menu.
MENU	Allows to access the main menu.
EXIT	Returns to the previous menu on the menu's screen or exit the menus.
OK	Runs the selected option. Shows the general programme list.
USB	USB Connector
Display	Indicates the selected channel.
LED's	Green: means signal presence in the antenna. Red: means STANDBY mode.

Back Panel

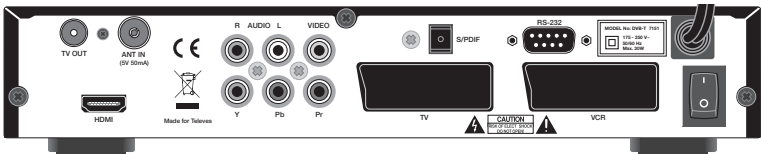

Name	Function
ANT IN	Signal input of terrestrial antenna (power supply +5V/50 mA selectable by menu)
TV OUT	RF Signal Output to connect it to a TV, a VCR or to other receiver.
HDMI	Interface for signal connection in high definition.
AUDIO L/R	Stereo analog audio output.
VIDEO	Composite video output.
Y, Pb, Pr	Component video output.
S/PDIF	Digital audio output.
RS-232	Connection to a serial port (RS232) to update the software.
TV	Video/Audio output to connect it to a TV via SCART.
VCR	Audio/Video Input/Output to connect it to a VCR via SCART.
I/O	ON/OFF switch.

3.1.- Remote Control

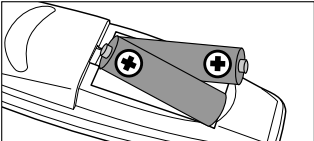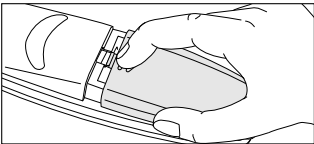

Make sure that the + and - poles of the batteries match up with the internal marks of the battery unit.

Key	Function
POWER	Switches the receiver on and off.
FAV	Shows the list of favourite channels.
MUTE	Eliminates the sound.
V-FORMAT	Changes the video output resolution.
MENU	Activates the main Menu.
TV/AV	Switches between TV or AV mode.
EPG	Activates the EPG (Electronic Programme Guide).
EXIT	Returns to the previous menu or exits the menu completely.
INFO	Shows information about the current channel. Press this key again for more details.
Page+/Page-	Moves one page forward or back in the channel list.
▲ / ▼	Selects an ascendent or descendent channel. Selects one element from the menu.
◀ / ▶	Turns the volume up/down. Selects one element from the menu.
OK	Runs the selected option. Shows the general programme list.
P+ / P-	Selects an ascendent/descendent channel.
V+ / V-	Turns the volume up/down.
AUDIO	Selects the different audio languages that are available.
TEXT	Activates the teletext function (if it is transferred).
Grid icon	Has several secondary functions depending on the menu.
Square icon	Activates or deactivates the Subtitle Menu.
Speaker icon	Audio channel selection (left, right, stereo).
Black square icon	Stops what is currently playing.
Play/Pause icon	Plays/Stops a selected element.
REC	Starts recording the selected programme.
Fast Return icon	Quick return in play mode (x2, x4, X8, x20).
Fast Forward icon	Moves forward quickly in play mode (x2, x4, X8, x20).
0 ... 9	Direct insert of numeric data (such as, the number of a programme).
TV/RADIO	Switches between TV and Radio mode.
← PR	Returns to Previous Channel.

Note: The red, green, yellow and blue keys have secondary functions that are not described here and that can appear in the different menus.

Notes:

- Point with the remote control directly at the receiver's sensor.
- Do not expose the remote control or the receiver to an intense source of light, such as, direct sunlight.
- Do not leave the control remote in an extremely wet or warm place.
- Do not spill water or place any wet element on the remote control. Normally batteries last approximately one year under normal USE conditions.

4.- Equipment Installation


This section explains how to install the receiver to a TV or to other A/V equipments.

Read the manuals provided with the equipment to install external equipment, such as, the antenna.

To add any new equipment, read the corresponding part of the manual for its installation.

4.1.- Connection to a TV

- Connect the antenna signal to the ANT IN connector of the receiver.
- Connect the audio and the video between the receiver and the TV using an SCART cable, RCA cables or a HDMI connection.

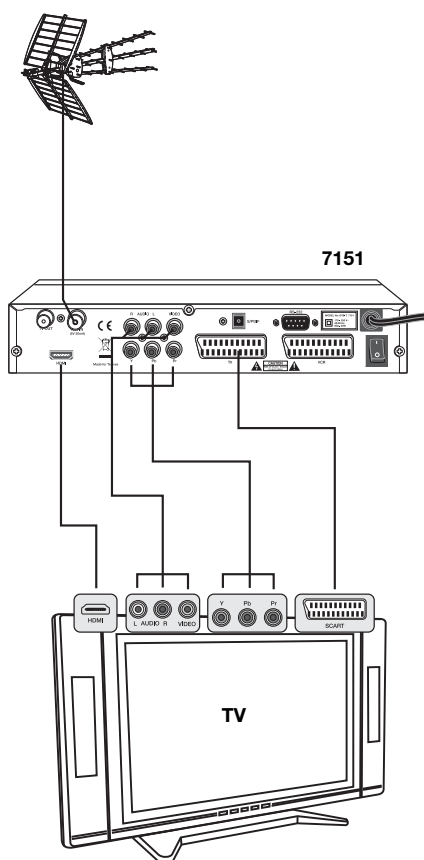

All cables used to connect the receivers will be shielded cables.

DO NOT PLUG IN the receiver to the electrical network until all the connections of the unit are finished.

5.- User's Installation

- Once all connections have been made, connect the receiver and follow the following instructions.

First of all a menu will appear, where you can select the OSD language you want.

Select the language you wish using the ◀/▶ keys and press **OK** to confirm.

The receiver will start searching automatically within the UHF band (from 21 to 69).

- The menu is divided into 5 sections:

- **Manager**
- **Guide**
- **Timer**
- **Install**
- **PVR**

- During the installation, the **OK** key can be used to confirm the selection and to show the channel list. You can also use the numeric keyboard to insert a value directly.

Press the **EXIT** key to exit the menu.



5.1.- Install

- This menu consists of 4 main submenus:

- **Channel Search**
- **System Setting**
- **Parental Lock**
- **Factory Default**



5.2.- Channel Search

- Country Code:** select your country.
- Channel:** Press the ◀/▶ key to select the channels in a cyclical way.
- Frequency:** enter the frequency using the numeric keyboard.
- FFT, FEC, Constellation, Guard Interval:** they cannot be edited by the user.
- Search Channels:** it allows you to search channels under the indicated conditions. Select one of the following options using the ◀/▶ keys and press the **OK** key.



- **Search Network:** search channels in the selected transponder.
- **Search All channels:** search all channels.
- **Search 1 Channel:** search within the selected channel.

The receiver will start searching automatically TV and Radio channels. During this process you will be able to see the channels found on the list of found channels.

Once the receiver has finished to search, the cursor places itself automatically on "Watch", press the **OK** key.



5.3.- System Setting

- The **System Setting** menu allows you to modify the main options and other parameters of the receiver to adapt it to its location.

- **OSD Language:** select the language you prefer for the menus.
- **Audio language:** select the language you prefer for the audio. This language will be shown in a priority way if it is emitted by the channel.
- **ANT Power:** if you are using an active antenna (with amplifier) you must activate this option to supply its amplifier with 5V/50mA power. The power supply is carried out using the coaxial cable connected to the ANT IN input of the receiver.
- **Video Format:** Select the video format you prefer between Letter Box, Pan Scan, Combined and Ignore.
- **Screen Format:** select the screen format between 4:3 or 16:9.
- **Video output:** select between RGB and CVBS.

Note: The YPbPr output only works if the CVBS mode is selected.

- **Transparency:** it is used to indicate the transparency level applied to the menus when they are active on the screen. Select the value you wish between 10 and 100%.
- **HD Format:** select between 1080i and 720p.
- **Digital Audio:** select between PCM and RAW.
- **LCN Select:** it allows the user to activate or deactivate the mode to organize channels set by the operator.
- **Start On Channel:** if you press the **OK** key the channel list will be shown. Select a channel from the list. The selected channel will be shown when turning on the receiver.



5.4.- Parental Lock

- This option allows you to lock channels by using a password in order to avoid kids or other people having access to contents that are not appropriate for them. You can also lock the free access to the installation data by using the "Install Lock" option.

- **How to change passwords:**

- Enter the current password.
- Activate (ON) the "Parental Lock" option.
- Enter the new password.
- Enter again the new password to confirm it.

Note: By default, the password is 0000.

Attention: Do not forget your new password once it has been changed. You will not be able to access locked programmes, the receiver and menus without it.

- **How to use the Parental Lock:**

- Select the **ON** option if you want to activate the programme lock. To lock programmes, see Section 7.5.- Programme Lock.

- **How to lock the installation:**

- Enter the current password.
- Activate (ON) the "Install Lock" option.
- Exit this menu.
- Select any menu and press **OK**.
- A window asking you to enter your password will appear.



5.5.- Factory Default

- If you want to return the receiver to its initial status (status by default), select "Factory Default" and press **OK**.
 - A notice message will come up. To continue, select OK and press the **OK** key.

Attention: All data and information entered by the user will be automatically deleted and replaced with the configurations preset by default.



6.- Basic operating functions

- Now this manual will describe the basic functions you can do while watching TV programmes.

While you are watching a programme, the information window of this programme will appear on the bottom of the screen if you press the **INFO** key.

6.1.- Select a channel

- To select a channel use the **▲ / ▼** key on the front panel, the **▲ / ▼** keys on the remote control or the numeric keyboard (0-9). Besides the normal operating function, the receiver offers other functions to select channels.
- While watching a programme, press the **OK** key on the remote control. The general programme list will appear on the screen. If you press the **EXIT** key, the list will disappear.
- To select a channel, scroll up and down through the list and place the cursor on the channel you want. Press **OK** to visualize the channel. If you press the **Page+/Page-** keys you will move page by page on the channel list.
- The functions to select the category (All, Favourite, A~Z, Cas) will be shown on the upper left corner. The yellow cursor will move up and down using the **▲ / ▼** keys. When you select one of the functions, such as **All**, a list with the channels corresponding to that category will appear on the right side. To switch from the function list to the channel list, press the **►** key. Move the cursor up and down to select a channel and press **OK** to see it on the screen. To return the cursor to the function list, press **◀**.
- Move the cursor to the **Favourite** function using the **▼** key and 32 list of favourites will be shown. If you have not selected any channel as favourite in the “Channel List” section, these 32 lists will be empty.
- When you use the **A~Z** function, 26 characters and “etc” will appear on the central list. When selecting one of these characters, the right list will show the channels whose name begins with that letter. If you press “etc”, the other channels will be shown.
- When you use the **Cas** function, several options to put the channels in order will be shown on the central list. If you select “FTA”, all free channels recorded on the receiver will be shown on the right list. The other options show the list of channels coded in that system.



6.2.- Return to previous channel

- Press the **← PR** key on the remote control to return to the last channel you have visualized.

6.3.- Volume and audio control

■ Volume Control

To turn the volume up or down, use the **V+/V-** keys on the remote control or the **◀/▶** keys on the remote control or on the front panel.

Note: The receiver has 32 volume levels. The volume can also be adjusted through the control of your TV.

■ Mute

To eliminate the sound, press the **MUTE** key on the remote control. To regain the volumen level, press this key again.

■ Audio control

Press the **🔊** key repeatedly to select one of the three modes for audio output between Stereo, Left or Right.

■ Audio Selection

Press the **AUDIO** key repeatedly to select one of the audios available in the programme. This function depends on whether the selected channel supports several audios or not.



6.4.- Favourites List

- To access the list of Favourite channels, press the **FAV** key. Before accessing this list, you must assign channels to the favourites lists on the “Channel List” menu. Otherwise, the lists will be empty.
- The process to assign channels to the favourites lists is explained in section. 7.2.- *Favourites Channels*.



7.- Channel Manager

- The receiver offers you the most powerful channel manager function that exists nowadays. It will make possible to manage the unit in a more interesting and usefull way.

7.1.- Manager

- This menu consists of managing TV and Radio channels. Press the **OK** key on the "TV Program Manager" option.

Note: Since the Radio channels are managed in the same way than the TV channels, this manual will only explain how to manage the TV channels.

- The list of channels that are available on the receiver will appear on the left side of the channel list menu. The image of the currently selected channel will be shown in a small screen on the right side and the information about the channel will appear on the bottom of the screen.

When the cursor switches from one channel to another, the image of the little screen varies depending on the selected channel.

- You can use the color keys on this menu as follow:

Red: Delete mode

Green: Favourites mode

Yellow: Move mode

Blue: Lock mode

Moreover, if you press the **MENU** key, you will access a submenu where you can:

Rename favorite group

Rename

Sort (Favorite, Lock, Scramble, Program Name).



7.2.- Favourites Channel

- When you select the "TV Program Manager" the list of **Favorite 1** will be shown by default.

- Select your favourite channel and press **OK**. The ☺ icon will be shown next to the name of the channel marked as favourite.

If you want the channel not to appear on the favourites list, press **OK** again and the ☺ icon will disappear.

- After selecting the favourite channels, press the **EXIT** key twice to save the modifications. Press **FAV** to access the channel lists and check that they have been created correctly.



7.3.- Edit Favourites

■ **How to create Groups of Favourites**

When you access the channel list, the group selected by default is **Favorite 1**.

Press the **green** key to activate a list with the 32 groups of favourites and select other one.

■ **How to edit the name of the Groups of Favourites**

Press the **MENU** key on the “TV Program Manager” menu. Then, a pop-up menu will appear.

Select the option “Rename favourite group” and press **OK**.

Write the new name for the group on the keyboard window.



7.4.- Move Channels


■ Press the **yellow** key on the channel list.

Select the channel that has to be moved by pressing **OK** on it, move to the new location and press **OK**. The selected channel will be moved to its new location on the list and the channel number will be consequently updated.



7.5.- Lock Channels

■ Press the **blue** key on the channel list.

Select the channel that has to be locked by pressing **OK** on it. The  icon will be shown next to the name of the channel marked. To unlock the channel, press again the **OK** key on it.

Note: If you want this option to be functional, the Parental Control must be activated (ON).



7.6.- Rename Channels

- Press the **MENU** key on the channel list. Then, select **Rename** on the pop-up menu.
- This menu allows to change the channel's name. First of all, select the channel to be modified and press **OK** on it. Write the new name on the keyboard window using both letters and numbers.
- Check that the name has been changed and updated on the channel list.



7.7.- Delete Channels

- Press the **red** key on the channel list to access the "Delete Channels" mode. If you press the red key repeatedly, you can switch among "Delete Channel", "Delete Programme" or "Delete All".
- This command makes possible to delete a channel in a permanent way. First of all, select the channel to be deleted and press **OK** on it. The **X** icon will be shown next to the name of the channel marked. To eliminate this mark, press again the **OK** key on it.
- Press **EXIT** to delete the channel once and for all. Press **OK** on the confirmation window to confirm.
- Check that the channel has been deleted from the channel list.

Warning: Deleted channels cannot be regained unless you search channels again.

Be careful when deleting channels.



7.8.- Sort Channels

- Press the **MENU** key on the channel list. Then, select **Sort** on the pop-up menu.
- This submenu allows to put the channel list in the order you want.
- You can sort by **Favorite**, **Lock**, **Scramble** and **Program Name**. Place the cursor on the line you want and press **OK**.
- Check that the channels have been correctly put in order.

Warning: The Radio Channel List has the same functions than the TV.



8.- EPG (Electronic Programme Guide)

- This receiver offers you the EPG function, so that you can access the TV (or radio) Guide, which will show you the titles and other information about the current and next programmes in the different channels.

This information is only available for the net channels that you are watching.

- Press **OK** on the "TV Program Guide" option on the "Guide" menu or press the **EPG** key on the remote control.

Now the EPG will appear. You can see the selected channel on the small screen, the channel list on the left side and the programmes of the selected channel on the right side. Time is shown depending on the current programme.

Select one channel and move the time mark ▼ until the programme you want to get information about. For more details about it, press the **blue** key and a new window with this information will appear (if it is available).

If you press the **green** or **yellow** key, you will be able to move the time bar 6 hours forward or back.

Note: The message "No EPG data" will be shown when this information is not available on the selected channel.

Special EPG of channel

- In normal operating mode (watching a programme), you can see the programmes that will be broadcasted by the current channel during the whole week (including its name, length, contents, etc) by pressing the **INFO** key twice.

You will see:

- Channel's name on the upper side.
- Date on the upper left corner.
- You can see the programmes of a particular day of the week between Sunday and Saturday using the ◀/▶ keys.
- The next line shows the EPG status. While searching information in the current channel, it shows the message "Researching EPG Information". After searching, it shows the message "EPG Information".
- The next line shows "Duration and Title". Here you will find the name and length of the next programmes. You can scroll up and down through the programme list using the ▲/▼ keys. At the same time, you can see detailed information about the programme on the right side of the window. If there is no data available, the message "No Detail Information" will be shown.



9.- Programme Events

- This function makes possible to programme events in different ways.

Note: The receiver shows the time received from the information provided by the service provider in the TV signal itself.

9.1.- Time Adjust

- Press **OK** on the “Time Adjust” option on the “Timer” Menu.

Note: It is not possible to edit any option: Year, Month, Date and Time; once this information has been sent by the service operator.



9.2.- Timer Reservation

- The receiver has a timer to turn it on and off automatically at a previously set time. It has 10 locations where you can programme the same number of events.

- You can select the channel in which it will be placed at turning on the unit.
- You can adjust the timer to work Once, Daily, Weekly or Monthly.
- Indicate whether the event is to turn on or off the receiver.
- Press YES on the Activated section to activate the timer.
- Insert the date using the ◀/▶ keys.
- Insert the start time of the event using the numeric keyboard.



10.- PVR

10.1.- Game

Here you can select one of the 6 games available in the receiver:

- **Black-White chess**
- **Greedy snake**
- **Push Box**
- **Five chess**
- **Russia Box**
- **Ball**

- Select one of the games available using the ▲ / ▼ keys and press **OK** to accept.
- Follow the instructions shown on the screen to play. If you have any doubt, press the **INFO** key for help.
- Press **EXIT** to exit the game at any time.



10.2.- Receiver information

In this menu you can get information about:

- Model
- SW version
- HW version
- Date



10.3.- PVR

Options available if there is an external disk connected to the unit.

Media Browser

Shows the list of recordings saved in the disk. See section 11.- "Record/Play".

Manual Recording

It allows you to programme a recording manually.

- Select the programme to be recorded and press the **red** key.
- Indicate the date at which the element must be recorded, its start time, the length of the recording, the storage time of the file, and how many times the recording will be repeated.
- If you want to delete the recording, press again the **red** key on the same programme and press **OK** to confirm.
- You can see the list of outstanding recordings if you press the **INFO** key three consecutive times in normal mode.

Reserved Recording List

It shows the list of outstanding recordings.

- Press the **red** key to delete the selected recording and press **OK** to confirm.
- To modify any of the recording data, press the **green** key.

PVR Setting

To configure the PVR values, access this function.

- Time Shift Period
- Storage Period
- Clean Up Mode
- Clean Up Threshold (%)
- Clean Up Type
- Start record earlier (min)
- End record later (min)
- PVR-Symbol Display duration

Press the **red** key to format the disk connected to the USB port.

Note: This operation will delete all data contained in the disk.



10.4.- Picture Browser

Option available if there is an external disk with JPG files connected to the unit.

- Press **OK** on the “Picture Browser” option of the “PVR” menu to activate the image viewer.
- Press the **◀/▶** keys to select the images.
- Press **OK** to visualize the image on full screen.
- Press the **blue** key to visualize the images in a continuous way.
- Press the **yellow** or **green** key to rotate the images in both directions.
- Press the **red** key to delete the selected image.
- Press the **⏏** key to show an image mosaic.
- Press **EXIT** to exit the viewer



10.5.- USB Browser

Option available if there is an external disk connected to the unit.

- Press the **red** key to create a new file in the disk.
- Press the **green** key to delete the selected element.
- Press the **yellow** key to copy a selected element.
- Press the **blue** key to move the selected element.
- Press the **⏏** key to rename the selected element.



10.6.- Remove Disk

Option available if there is an external disk connected to the unit.

- Press **OK** to dismantle the disk and remove it.



11.- Record/Play

This receiver allows you to record a programme on an external disk in two different ways: one in real time and another using the "Timer" option.

To make this function available, there must be an external disk or a pen drive (memory stick) with FAT 32 format and a capacity higher than 2 GB.

When you connect a disk or pen drive to the receiver, the message "USB inserted" will appear on the screen.

■ Recording in Real Time

- Press the **REC** key to record the programme you are watching.
- Press the **■** key to stop recording. A message will appear on the screen where you must confirm that you want to stop recording by pressing **OK** on the "Stop the recording" option.

Notes:

- You cannot record more than one programme at the same time. However, you can watch another programme that belongs to the same multiplex.
- Once the recording has started and if it is not stopped, it will finish after 120 minutes (preset value that can be modified on the PVR-Setting Menu).

■ Temporized Recording (manual).

- See Section "9.2.- Timer Reservation" to get information about how to create events by indicating the recording start time, end time, programme, etc.

■ Play

- Access the "Media Browser" option from the "PVR" menu to show the list of recorded programmes.
- Select one of the recorded programmes from the list using the **▲ / ▼** keys and press **OK** to Play it.
- When a programme is being played, the **◀◀, ▶▶, ▶, ||** keys can be used to move forward or back in the time bar, move forward, make a pause, etc.
- Press the **■** key to stop playing.
- Press the **red** key to delete the selected recording.
- Press the **green** key to lock the selected recording. The "Parental Lock" must be activated.
- Press the **yellow** key to show the list of recordings in list format or in image mosaic format.
- Press the **blue** key to get information about the selected recording.
- Press the **⌨** key to rename the selected element using the keyboard shown on the screen.



11.1.- Time Shift Function

Option available if there is an external disk connected to the unit.

Timeshift is the time that passes between the video in real time and the video recorded in the hard disk.

- Press one of the ◀◀, ▶▶, ▶, || keys while you are watching a TV programme. Select OK and press the OK key on the pop-up window.
- Use the ◀◀ or ▶▶ keys if you want to adjust the time bar to search certain scenes.
- Press the INFO key to see the time bar and check how long the unit has been recording and in which moment of the playing you are.
- To exit the TimeShift function and watch again the broadcast in real time, press the ■ key. A message will appear where you must confirm that you want to stop the Time Shift function by pressing OK on the OK option.

Note: If you change programmes while the TimeShift function is being run, you will lose all the information saved up to that moment and it will continue recording the new programme.

The maximum time assigned to this function is 30 minutes.

 


Terminological Glossary

Now the meaning of some terms and abbreviations used in this User's Guide will be explained in a brief and easy way.

- **DVB:** Digital Video Broadcasting.
Group of different International Organizations and Companies aimed at establishing international standards for the development of the Digital Television.
- **EPG:** Electronic Programme Guide
Guide that offers a list with the events that will be broadcasted by each programme, their broadcasting time and a description of their contents.
- **Letterbox:** A way to show on 4:3 televisions programmes broadcasted with 16:9 format. In this case two black bands will appear on the upper and lower part of the screen to create a window with this format.
- **MPEG4:** Group of digital audio/video compression standards used by the DVB.
- **OSD:** On Screen Display.
System of Menus on the screen.
- **Digital:** Sound converted into numeric values. You must use the SPDIF or HDMI connectors to have digital sound. This connectors send the sound through several channels, instead of through only two as in the analog system.
- **JPEG:** Joint Picture Expert Group
System of photographic data compression that makes possible a high compression with scarce loss of quality.
- **MP3:** File format with an audio data compression system.
- **PCM:** Pulse Code Modulation
This system turns the analog signal into digital signal so that it can be treated later. This conversion is carried out without compressing data.
- **HDMI:** High Definition Multimedia Interface.
High definition Multimedia Interface that makes possible to use standard, improved or high definition video, as well as multichannel digital audio just in one cable.
- **USB:** Universal Serial Bus
Port used to connect peripheral elements.
- **PVR:** Personal Video Recorder
Interactive device for television recordings in digital format.
- **SPDIF:** Sony/Philips Digital Interface Format
Hardware Protocol to transfer digital stereo audio signals modulated in PCM between stereophonic components and devices.
- **Display VFD:** Vacuum Fluorescent Display
Mechanism of certain electronic devices that makes possible to show information to the user.

Menu Structure

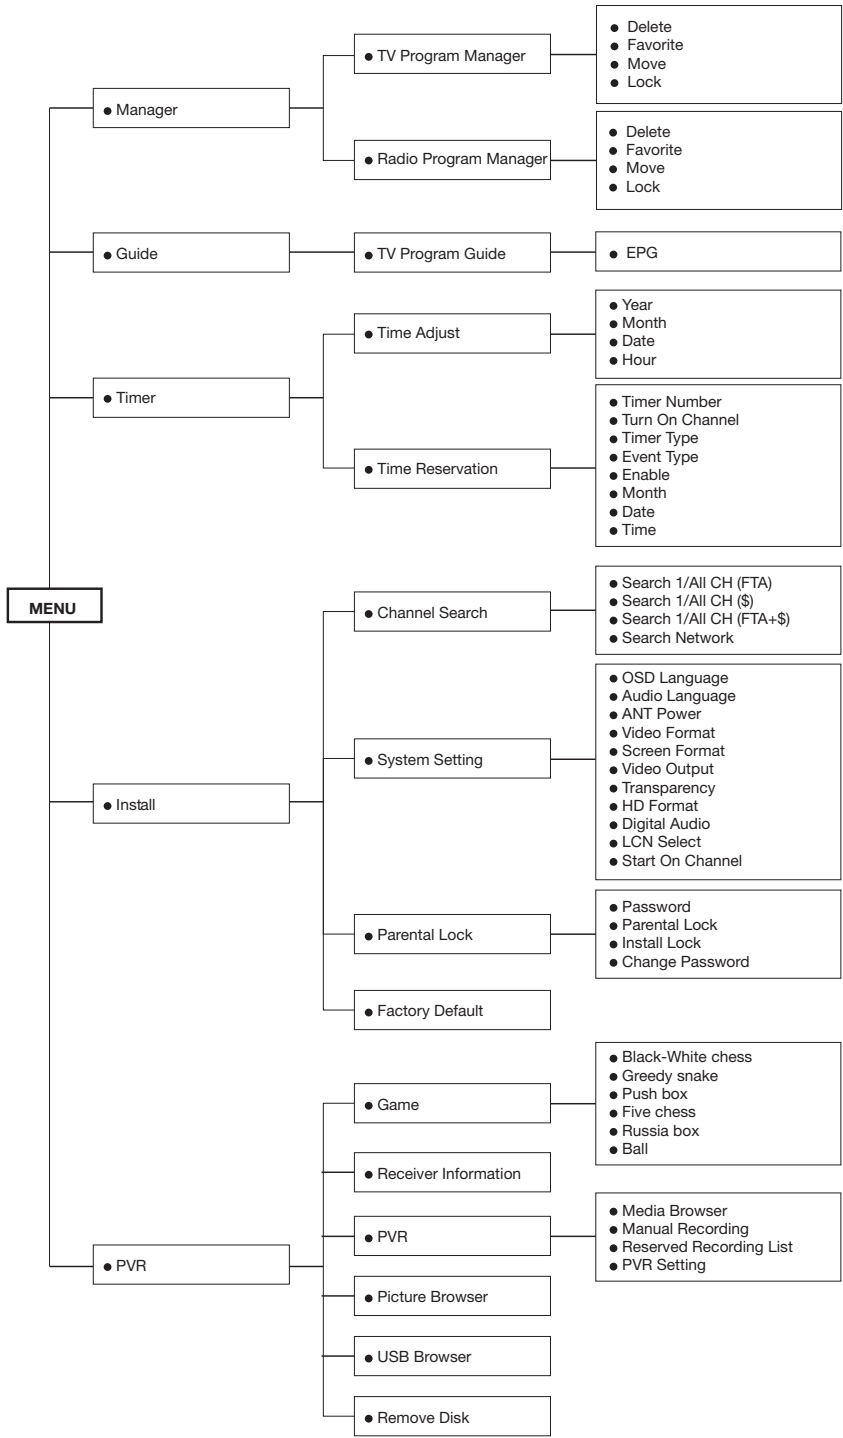

Technical Specifications

System capacity

Tuner

Input connector	IEC 169-2, female
Output connector	IEC 169-2, male
Frequency range	470 - 862 MHz
Input impedance	75 Ohm
Signal level	64QAM: -78.5dBm ~ -8.75dBm 16QAM: -84.1dBm ~ -8.75dBm
Antenna Supply	5VDC @ 50mA Max, overload protection

Decoder

Standard Demod.	DVB-T (ETS 300 744)
Modulation	OFDM
Bandwidth	7-8MHz
Carrier Mode	2K & 8K
FEC	1/2, 2/3, 3/4, 5/6, 7/8
Guard Interval	1/4, 1/8, 1/16, 1/32

Processor

CPU Frequency	266 MHz
Flash Memory	1PC 64Mbit/8MByte
SDRAM Memory	4PC 16X16Mbit/32Mbyte DDR

TS Demux

Demultiplexer	MPEG2 ISO/IEC 13818-1
Input Bit Rate	Max. 100Mbit/s

Video

Decoder	MPEG2 ISO/IEC 13818-2 MP@ML, H.264 (MPEG4 part 10) main & highprofile level 4.1/MPEG-2 MP@HL
Image Format	4:3, 16:9
Resolution	1920x1080, 1280x720, 720x480

Audio

Audio Decoder	WMA-9, WMA-9 Pro, MPEG-1 layerI/II, MPEG-2 layer II, MPEG-2 AAC, MPEG-4 AAC LC 2ch/5.1ch
Type	LEFT/RIGHT/STEREO/MONO
Sampling Rate	32, 44.1, and 48 KHz

AV Outputs

Video impedance	75 ohm
Video Level	1.0 Vp-p
Audio Freq. Rang	20 ~ 20KHz
Audio Impedance	600 ohm
Audio level	2V rms (5.6Vp-p)

General



Input voltage	175 - 250 V~, 50/60 Hz
Power consumption	30 W Max.
Temperature	0~40 °C
Humidity	<95 %

Guarantee

Televén S.A. offers a two year guarantee, beginning from the date of purchase for countries in the EU. For countries that are not part of the EU, the legal guarantee that is in force at the time of purchase is applied. Keep the purchase invoice to determine this date.

During the guarantee period, Televés S.A. complies with the guarantee by repairing or substituting the faulty equipment.

The harm produced by improper usage, wear and tear, manipulation by a third party, catastrophes or any other cause beyond the control of Televis S.A. is not included in the guarantee.

<h1>Televes</h1>	<h2>DECLARATION OF CONFORMITY N° 090429083415</h2>	
	DECLARACIÓN DE CONFORMIDAD DECLARAÇÃO DE CONFORMIDADE DECLARATION OF CONFORMITE DICHIARAZIONE DI CONFORMITA	KONFORMITÄTSERKLÄRUNG ΠΙΣΤΟΠΟΙΗΤΙΚΟ ΣΥΜΜΟΡΦΕΙΑΣ FÖRSÄKRAN OM ÖVERENSSTÄMMELSE VAATIMUSTENMUKAISUSVARMUUS
Manufacturer / Fabricante / Fabricante / Fabricante / <i>Fabrikant / Käyttäjän nimi / Tilvorkare / Valmistaja:</i> Address / Dirección / Adresse / Indirizzo / Adresse / <i>Адрес / Адрес / Adresse /</i> VAT / NIF / NIF / VAT / VAT / Steuernummer / AðM / Mott / ALV:	Televes S.A. Rúa Benéfica de Conxo, 17 15706-Santiago de Compostela (Spain) A-15010176	
<p>Declare under our own responsibility the conformity of the product / <i>Declaro bajo su exclusiva responsabilidad la conformidad del producto / Declara sob sua exclusiva responsabilidade a conformidade do produto / Déclare sous notre propre responsabilité la conformité de ce produit / Dichiaro sotto la sua esclusiva responsabilità la conformità del prodotto / Wir übernehmen die Verantwortung für die Konformität des Produktes / Διασφαλίζουμε με δική μας ευθύνη την συμμόρφωση του προϊόντος / Försäkrar om överensstämmelse enligt tillverkarens eget ansvar för produkten / Vakuutamme yksinomaan omalla vastuullamme tuotteen yhtämuutaisuuden:</i></p>		
Reference / Referencia / Referência / Référence / Articolo / <i>Artikelnnummer / Número / Referens / Referenz:</i> Description / Descripción / Descrição / Description / Descrizione / <i>Beschreibung / Περιγραφή / Beskrivning / Kausus:</i> Trademark / Marca / Marca / Marque / Handelsmarke / <i>Mögen / Varumärke / Tavaramerkki:</i>	7151 RECEPTOR TDT MPEG4 Televes	
<p>With the requirements of / Con los requerimientos de / Com as especificações de / Avec les conditions de / Con i requisiti di / Die Voraussetzungen erfüllen / Με τη συμμόρφωση / Taisot jäljande bestämmelser / Seuraavien määräysten:</p> <ul style="list-style-type: none"> • EMC Directive 2004 / 108 / EC. • Low Voltage Directive 2006 / 95 / EC. 		
<p>Following standards / Con las normas / Com as normas / Selon les normes / Con le norme / Folgende Anforderung / Aκόλουθα προτύπων / Føljande standard / Seuraavien standardien:</p> <p>EN 60965:2002 + A1:2006; Audio, video and similar electronic apparatus - Safety requirements EN 55032:2001 + A1:2003 + A2:2006; Sound and television broadcast receivers and associated equipment - Radio disturbance characteristics - Limits and methods of measurement EN 55020:2007; Sound and television broadcast receivers and associated equipment - Immunity characteristics - Limits and methods of measurement</p>		
<p style="text-align: right;">Santiago de Compostela, 29 de Abril de 2009</p> <div style="text-align: right;">  José L. Fernández Carnero Technical Director </div>		
<div style="text-align: center;">  </div>		

ENGLISH




Disposal of Old Electrical & Electronic Equipment

(Applicable in the European Union and other European countries with separate collection systems).

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RED COMERCIAL - COMMERCIAL NETWORK

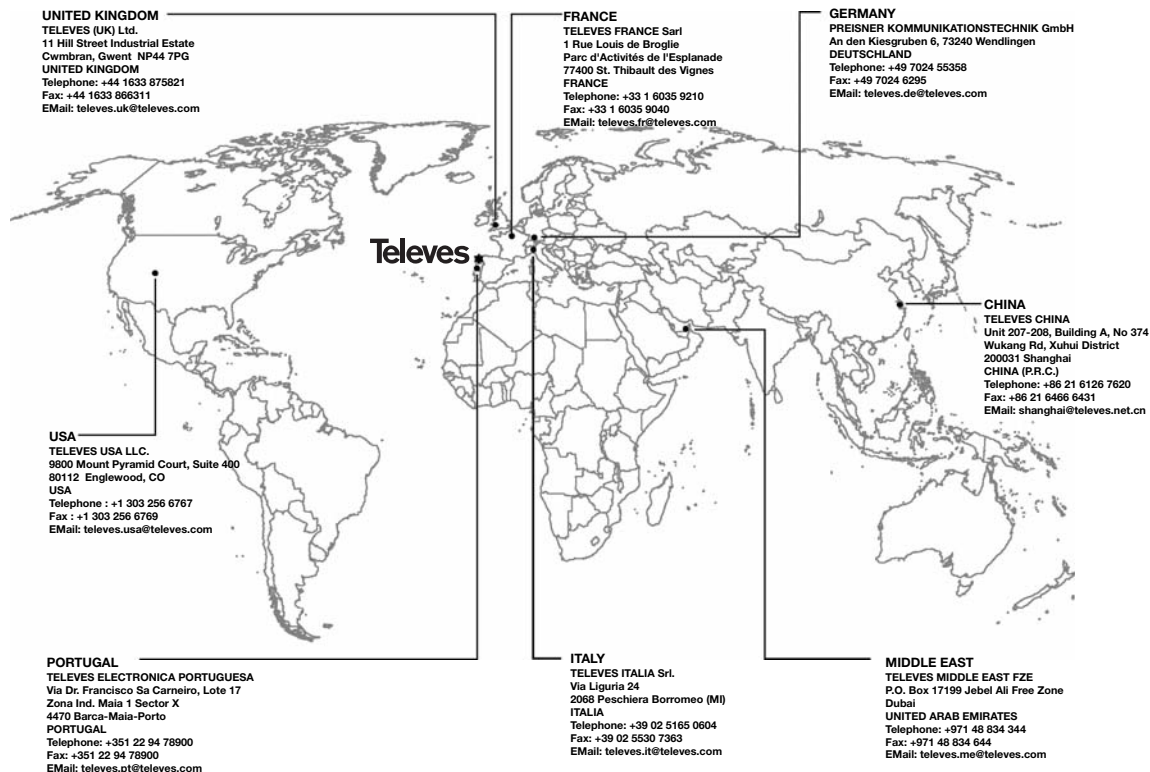

- * Oficinas Centrales / Head Office
- Delegaciones / Subsidiaries

Sucursales / Distributors

Para conocer nuestra red de sucursales en el mundo, le rogamos consulte en nuestra pagina web
 Please visit Televes web site to find your nearest Official Distributor

Televes

Rúa Benéfica de Conxo, 17
 15706 - Santiago de Compostela
 ESPAÑA (SPAIN)

Tel: +34 981 52 22 00 - Fax: +34 981 52 22 62
teles@teles.com - www.teles.com